

Starting SlingPlayer Mobile

1. From the home screen on your Pocket PC, tap **Start > Programs** to view the installed programs.
2. Tap **SlingPlayer Mobile**.
You may have to scroll to see all installed programs.


Adding a Slingbox

1. Tap **Player > Slingbox Directory > Add New Slingbox**.
2. Enter the **Slingbox Alias** of the Slingbox.
3. Enter the Finder ID or IP Address/Port.
4. Enter the Password. Use the Admin Password if required.
5. Tap **OK**.

Connecting to a Slingbox

1. Tap **Player > Slingbox Directory > the required Slingbox > Watch**.

Viewing/Display Options

- **Full Screen.** Tap  to change the orientation from landscape to portrait and vice versa.
- **Normal/Slideshow/Audio Only.** Select **Player > Player Mode >** and the required mode.
- **Normal/ Widescreen.** Tap **Player > Display Options >** the required option.

Volume Control

You can change the volume of SlingPlayer Mobile in the following ways:

- Use the volume control slider.
- Use the Pocket PC's volume control to increase/decrease volume.

SlingRemote

Use SlingRemote in the same way you would use your physical remote control. You can change channels, pause your DVD player, schedule your DVR, and so many other features.

1. Tap  to open SlingRemote.

Adding Favorite Channels

1. While streaming, tap and hold a favorites box.
2. Tap **Add/Edit Channel**.
3. Add **Channels With Logos** or **Custom Channels**.
4. Add the required details.
5. Tap **OK**.

Adding Favorite Commands

1. While streaming, tap and hold a favorites box.
2. Tap and select the remote control category and then the command.

Using Favorites

Tap the required channel or control to execute the remote control command.

SlingPlayer Mobile™ for Pocket PC

Pocket Guide

© 2006 Sling Media, Inc.
All rights reserved.
Patents pending.



Full Screen Mode Navigation

In Full Screen Mode,

- In full screen, tap the bottom-right portion of the screen to view the taskbar and favorites.
- To use SlingRemote, tap the SlingRemote icon in the Taskbar.
- Tap the center of the screen to hide the controls.


Folding Instructions

1. Fold **a** to **e**.
2. Fold **i** to **l**.
3. Fold **n** to **o**.
4. Fold the stub to **Folding Instructions**.

Shortcuts

1. Click the hardware button to execute the command.

Note: Only for Windows Mobile 4.2 devices.

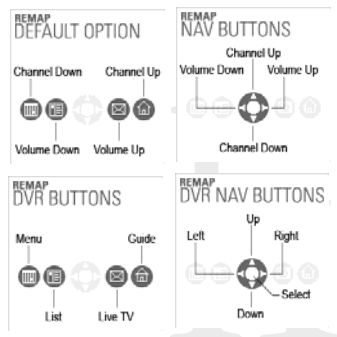

Contents

Starting SlingPlayer Mobile	a
Adding a Slingbox	b
Connecting to a Slingbox	c
Viewing/Display Options	d
Volume Control.....	e
SlingRemote	f

Adding Favorites Channels.....	g
Adding Favorites Commands.....	h
Using Favorites.....	i
Full Screen Mode Navigation.....	j
Shortcuts	k
Switching Inputs	l
Folding Instructions.....	m
Closing SlingPlayer Mobile.....	o


Switching Inputs

To switch between inputs:

1. While streaming from your Slingbox, tap **Player > Video Input** > the desired input.
SlingPlayer Mobile switches to the input you selected. The time taken for the change depends on your connection speed.

Closing SlingPlayer Mobile

1. Tap **Stop**.
 2. Tap **Player > Exit**.
- OR

Tap  on the top-left portion of the screen (default, can be changed).
Any other method only hides SlingPlayer Mobile.