

Starting SlingPlayer Mobile

1. From the home screen on your smartphone, select **Start** to view the installed programs.
2. Browse to SlingPlayer Mobile. You may have to select **More** to browse through all installed programs.
3. Select SlingPlayer Mobile and press the Select button.

Adding a Slingbox

1. Select **Menu > Slingbox Directory**.
2. Select **Menu > Add New Slingbox**.
3. Enter the **Name** of the Slingbox.
4. Enter the **Finder ID** or **IP Address/Port**.
5. Enter the **Password**. Use the **Admin Password** if required.
6. Select **Done**.

Connecting to a Slingbox

1. Select **Menu > Slingbox Directory**.
2. Select a Slingbox using the navigator keys.
3. Select **Watch**.
Alternatively, press the corresponding number (or letter).

Navigation

- **Navigator Keys.** You can select items by navigating up, down, left, or right and by pressing the Select button.
- **Numeric Keys (Letter Keys).** Press the corresponding number (letter) to select.
- **Remote Control.** Select **Menu > Remote Control**. Use the navigator or numeric/letter keys.

Viewing Options

With SlingPlayer Mobile, you have four viewing options:

- **Full Screen.** Press * (Alt and *).
- **Normal/Slideshow/Audio Only.** Select **Menu > Player Mode >** and the required mode.

Volume Control

To control the volume:

- Select **Menu > Volume > Up/Down/Mute**.
- Use the left/right navigator keys to decrease/increase volume (if you are connected to a coaxial input).
- Use the smartphone's volume control to increase/decrease volume.
- Use the preset Player Volume Favorite.

Changing Channels

To change channels:

- Select **Menu > Remote > General >** to change channels.
- In the numeric input mode (*123*), press the channel number on your keypad.
- Use the up/down navigator key (if you are connected to a coaxial input).
- Use the preset Channel Up-Down Favorite.

Adding Favorites

1. While streaming, select **Menu > Edit Favorites**.
2. Use the up/down navigator keys to select a favorite's box.
3. Then use left/right navigator keys to select and add a command/channel.
4. Select **Done**.

Also, in the FAV1/FAV2 mode, press and hold the Select button to add/edit favorites.

Using Favorites

1. Press # (<space>) to toggle between the two Favorite bars.
2. Use the navigator keys to select your favorite box.
3. Press the Select button.
4. Press # (<space>) (once/twice) to exit this mode.

SlingPlayer Mobile™ for Windows Smartphone

Pocket Guide

© 2006 Sling Media, Inc.
All rights reserved.
Patents pending.



Preset Favorites

There are three preset favorites in SlingPlayer Mobile:

- **Player Volume.** Control the volume.
- **Switch Screen Mode.** Toggle between portrait and landscape mode.
- **Channel Up-Down.** Change channels.

You can control just about anything by configuring your other favorites.

Folding Instructions

1. Fold **a** to **e**.
2. Fold **i** to **l**.
3. Fold **n** to **o**.
4. Fold the stub to **Folding Instructions**.

Switching Inputs

To switch between inputs:

1. While streaming from your Slingbox, select **Menu > Video Input >** the desired input. SlingPlayer Mobile switches to the input you selected. The time taken for the change depends on your connection speed.

Contents

Starting SlingPlayer Mobile	a
Adding a Slingbox	b
Connecting to a Slingbox	c
Navigation	d
Viewing Options	e
Volume Control.....	f
Changing Channels	g
Adding Favorites	h

Using Favorites.....	i
Preset Favorites	j
Switching Inputs	k
Phone Options	l
Folding Instructions	m
Closing SlingPlayer Mobile.....	o

Phone Options

Choose between continuing or disconnecting video streaming when you get a call.

1. Select **Menu > Player Options > Phone**.
2. Select the required option.
3. Select **Done**.

Closing SlingPlayer Mobile

1. Select **Stop**.
2. Select **Menu > Exit**.